

Process to Set Temperature

1. To change **Temperature** (set point) **Setting**,
Press the Set Key twice.
(Note: Pressing the set key once will access the Fahrenheit/Celsius Mode.)
2. The LCD will display the current **Temperature**
(set point) **Setting**, (Factory setting is 101°F).
(Note: The S1 annunciator will be blinking to indicate the control is in the change mode)

Press the up arrow key to increase the Temperature Setting

Or

Press the down arrow key to decrease the Temperature Setting.

3. **Press the Set Key Twice** to complete the Temperature Change.

