

Attention Assembler: Attach This Sheet To Front of Case

Attention!



**These Adjoined Cases
Have Synchronous
Defrosts.**

**Synchronous Defrost
Plugs Must Be Connected
At Rear of Electrical Box
During Case Adjoinment!**

**See Your Case's Wiring
Diagram For Instructions.**



Scan to watch the
Sync Defrost
installation process.

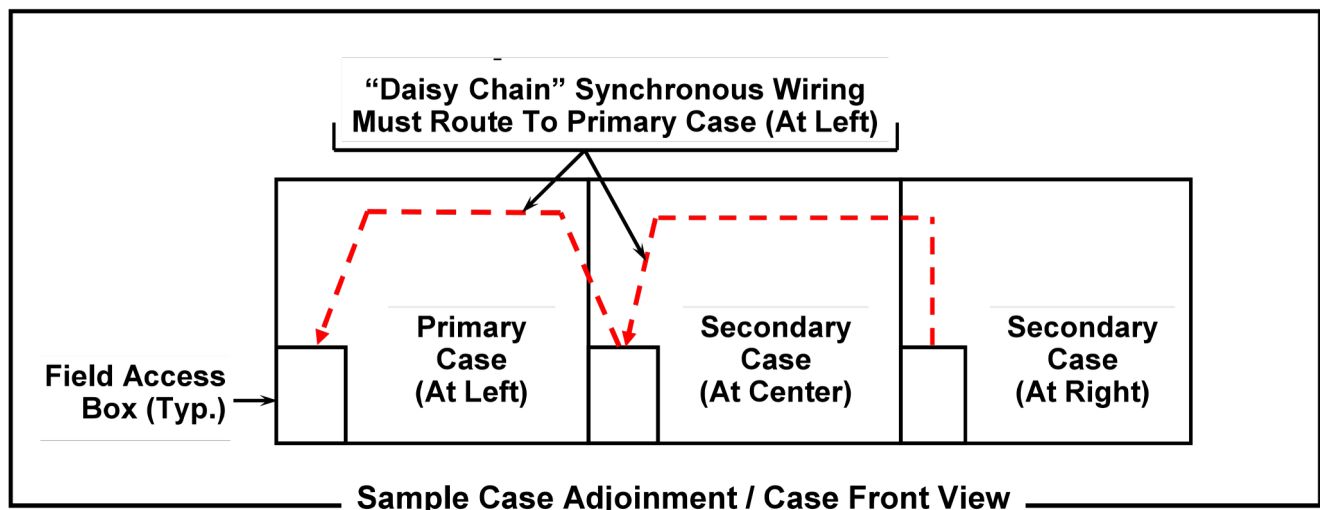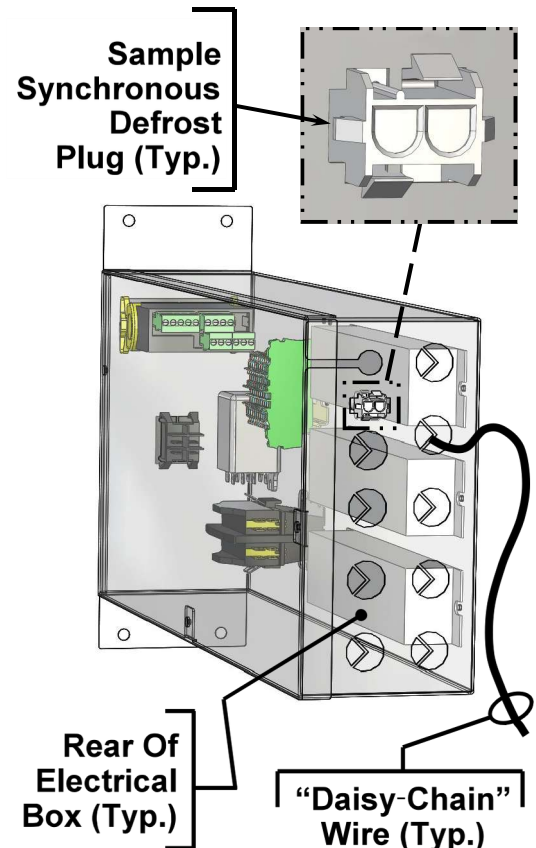

SCC P/N 20-61248